

FILTER

## GPL32AG Fuel Filter

GPL32AG Fuel Filter The fuel enters the inlet of the filter,through the transfer value into the oil chamber of the filter,and into the cleaning oil chamber through the metal filter core from the outside to the insi...

ISO9001 Supplier

Class Certificate

Export Supply



### Key Highlights

Category	Filter
Standard	EN
Material	Filter medium Work temperature Work pressure Filter precision Flow light...
Weight / Size	GPL32AG Fuel Filter Structure Diagram GPL32AG Fuel Filter Technical Para...
Certificate	ABS, LR, BV, DNVGL, NK, KR, IRS, RMRS, CCS

We can supply according to your requirement, drawings, class certificate needs, and delivery schedule.

Technical Specifications			
<b>Category</b>	Filter	<b>Model / SKU</b>	GPL32AG-Fuel-Filter
<b>Standard</b>	EN	<b>Material</b>	Filter medium Work temperature Work pressure Filter precision Flow light-heavy oil 150°C 16bar 37um 1.5~3m <sup>3</sup> /h Filter core,filter screen adopt stainless steel,the washer adopts Viton.
<b>Weight / Size</b>	GPL32AG Fuel Filter Structure Diagram GPL32AG Fuel Filter Technical Parameters Model Over size(mm) Installing size(mm) L1 H4 H H1 H2 H3 D1 N-D1 L2 N-D GPL32A 300 480 650 138 270 80 80 4-M10 160 2-14 GPL32AG GPL40 300 537 750 138 297 120 100 4-M12 160 2-14	<b>Surface</b>	GPL32AG Fuel Filter The fuel enters the inlet of the filter,through the transfer value into the oil chamber of the filter,and into the cleaning oil chamber through the metal filter core from the outside to the inside, then into the fuel system of diesel engine,the pressure difference of the inlet and the outlet of the filter is 0.05- 0.10MPa, when it surpasses 0.10Mpa, the handle must be turned a round anticlockwise,the dirt on the surface of the metal core is bladed,the pressure difference falls,if the result is not good,the metal core can be disaeesmbled and washed.
<b>Certificate</b>	ABS, LR, BV, DNVGL, NK, KR, IRS, RMRS, CCS	<b>Warranty</b>	12 Months unless specified otherwise
<b>Origin</b>	China		



<b>CONTENTS</b>	<ul style="list-style-type: none"> <li>■ GPL32AG Fuel Filter</li> <li>■ GPL32AG Fuel Filter Technical Parameters</li> </ul>	<ul style="list-style-type: none"> <li>■ GPL32AG Fuel Filter Structure Diagram</li> </ul>
-----------------	---	---

## GPL32AG Fuel Filter

The fuel enters the inlet of the filter,through the transfer value into the oil chamber of the filter,and into the cleaning oil chamber through the metal filter core from the outside to the inside, then into the fuel system of diesel engine,the pressure difference of the inlet and the outlet of the filter is 0.05-0.10MPa, when it surpasses 0.10Mpa, the handle must be turned a round anticlockwise,the dirt on the surface of the metal core is bladed,the pressure difference falls,if the result is not good,the metal core can be disaeesmbled and washed.

Filter medium	Work temperature	Work pressure	Filter precision	Flow
light-heavy oil	150°C	16bar	37um	1.5~3m <sup>3</sup> /h
Filter core,filter screen adopt stainless steel,the washer adopts Viton.				

## GPL32AG Fuel Filter Structure Diagram

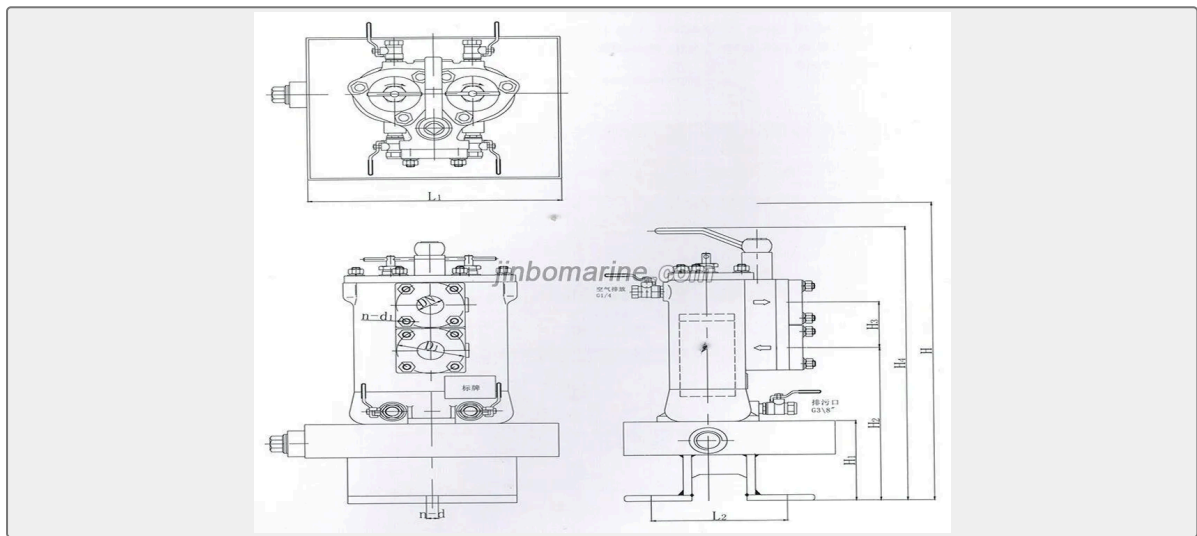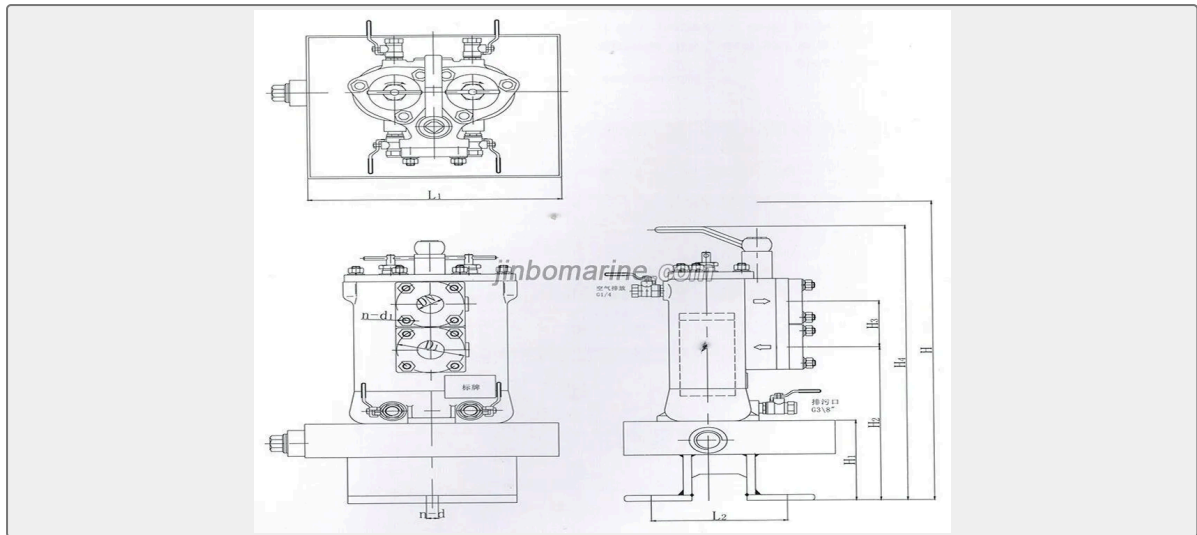

## GPL32AG Fuel Filter Technical Parameters

Model	Over size(mm)			Installing size(mm)						
	L1	H4	H	H1	H2	H3	D1	N-D1	L2	N-D
GPL32A	300	480	650	138	270	80	80	4-M10	160	2-14
GPL32AG										
GPL40	300	537	750	138	297	120	100	4-M12	160	2-14