



The hydraulic puller moves directly forward with the hydraulic starting rod, so the push rod itself does not rotate. The hook seat can be adjusted forward and backward directly with the thread. During operation, as long as the handle swings back and forth slightly, the hydraulic starter rod moves forward, and the hook correspondingly retreats to pull out the pulled object.

Model	DYF-5	DYF-10	DYF-20	DYF-30	DYF-50	DYF-100
Safe weight(T)	5	10	20	30	50	100
Stroke(mm)	60	60	60	60	60	100
Three-jaw adjustment range(mm)	50-250	50-300	100-450	150-500	200-550	250-600
Working pressure(MPa)	40	63	63	63	63	63