

FILTER

GPL32A Fuel Filter

GPL32A Fuel Filter The fuel enters the inlet of the filter,through the transfer value into the oil chamber of the filter,and into the cleaning oil chamber through the metal filter core from the outside to the insid...

ISO9001 Supplier

Class Certificate

Export Supply



Key Highlights

Category	Filter
Standard	EN
Material	Filter medium Work temperature Work pressure Filter precision Flow light...
Weight / Size	GPL32A Fuel Filter Structure Diagram GPL32A Fuel Filter Technical Parame...
Certificate	ABS, LR, BV, DNVGL, NK, KR, IRS, RMRS, CCS

We can supply according to your requirement, drawings, class certificate needs, and delivery schedule.

Technical Specifications			
Category	Filter	Model / SKU	GPL32A-Fuel-Filter
Standard	EN	Material	Filter medium Work temperature Work pressure Filter precision Flow light-heavy oil 150°C 16bar 37um 1.5~3m³/h Filter core,filter screen adopt stainless steel,the washer adopts Viton.
Weight / Size	GPL32A Fuel Filter Structure Diagram GPL32A Fuel Filter Technical Parameters Model Over size(mm) Installing size(mm) L1 H4 H H1 H2 H3 D1 N-D1 L2 N-D GPL32A 300 480 650 138 270 80 80 4-M10 160 2-14 GPL32AG GPL40 300 537 750 138 297 120 100 4-M12 160 2-14	Surface	GPL32A Fuel Filter The fuel enters the inlet of the filter,through the transfer value into the oil chamber of the filter,and into the cleaning oil chamber through the metal filter core from the outside to the inside, then into the fuel system of diesel engine,the pressure difference of the inlet and the outlet of the filter is 0.05-0.10MPa, when it surpasses 0.10Mpa, the handle must be turned a round anticlockwise,the dirt on the surface of the metal core is bladed,the pressure difference falls,if the result is not good,the metal core can be disaeesmbled and washed.
Certificate	ABS, LR, BV, DNVGL, NK, KR, IRS, RMRS, CCS	Warranty	12 Months unless specified otherwise
Origin	China		


CONTENTS	■ GPL32A Fuel Filter	■ GPL32A Fuel Filter Structure Diagram
	■ GPL32A Fuel Filter Technical Parameters	

GPL32A Fuel Filter

The fuel enters the inlet of the filter,through the transfer value into the oil chamber of the filter,and into the cleaning oil chamber through the metal filter core from the outside to the inside, then into the fuel system of diesel engine,the pressure difference of the inlet and the outlet of the filter is 0.05-0.10MPa, when it surpasses 0.10Mpa, the handle must be turned a round anticlockwise,the dirt on the surface of the metal core is bladed,the pressure difference falls,if the result is not good,the metal core can be disaeesmbled and washed.

Filter medium	Work temperature	Work pressure	Filter precision	Flow
light-heavy oil	150°C	16bar	37um	1.5~3m³/h
Filter core,filter screen adopt stainless steel,the washer adopts Viton.				

GPL32A Fuel Filter Structure Diagram

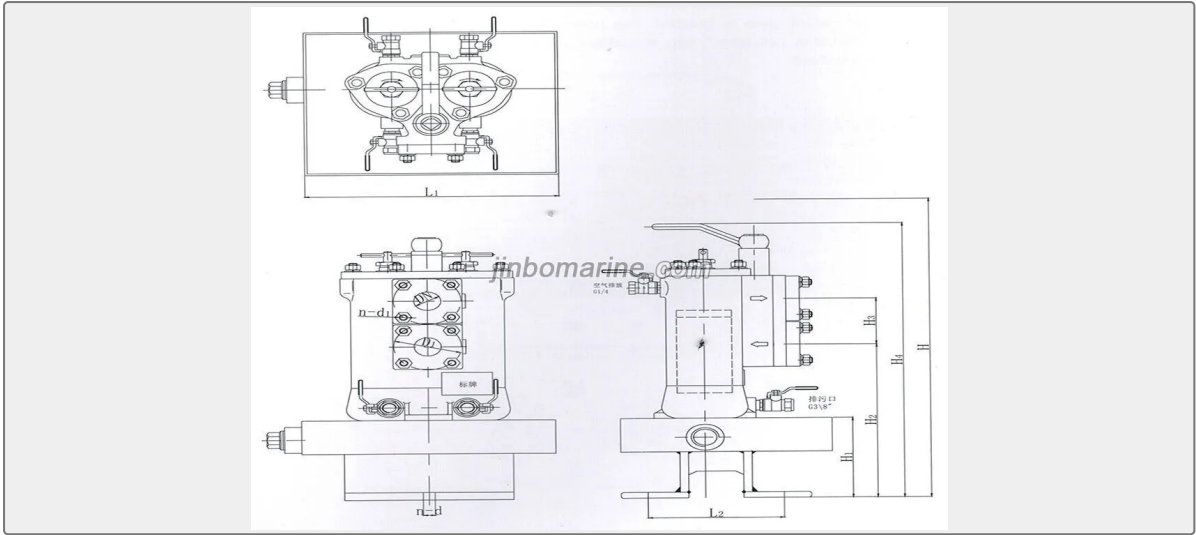

GPL32A Fuel Filter Technical Parameters

Model	Over size(mm)			Installing size(mm)						
	L1	H4	H	H1	H2	H3	D1	N-D1	L2	N-D
GPL32A	300	480	650	138	270	80	80	4-M10	160	2-14
GPL32AG										
GPL40	300	537	750	138	297	120	100	4-M12	160	2-14